



SUPERBOOST CONFIGURATION GUIDE

Thank you for purchasing SuperBoost! You are now only a few steps away from stronger Wi-Fi! There are a couple of different ways to set up your SuperBoost:


Setting up the Wi-Fi repeater wirelessly using a desktop:

1. Plug the Wi-Fi repeater into a power outlet.
2. Connect your desktop to the Wi-Fi repeater to begin setup.


Open the network icon and choose **“Wi-Fi Repeater”**, then click connect.

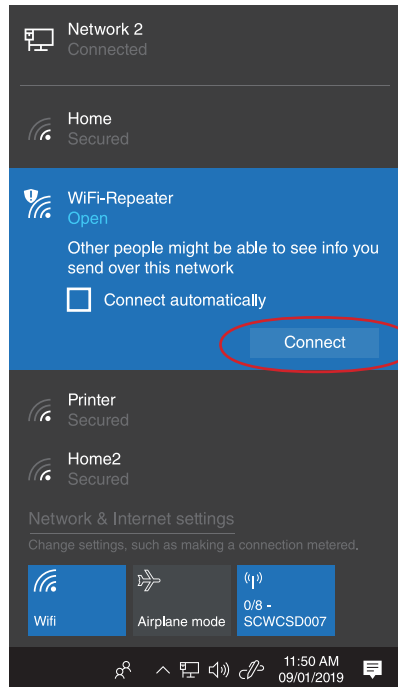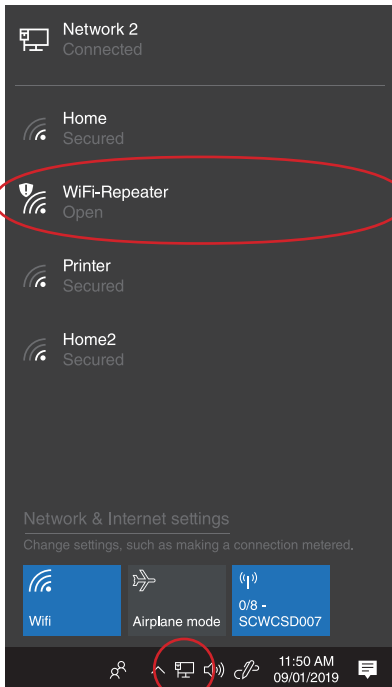

3. If the login page does not automatically show up, go to any browser (Internet Explorer, Firefox, Safari, etc.) and type in the IP address as indicated both here and on the device itself: 192.168.10.1

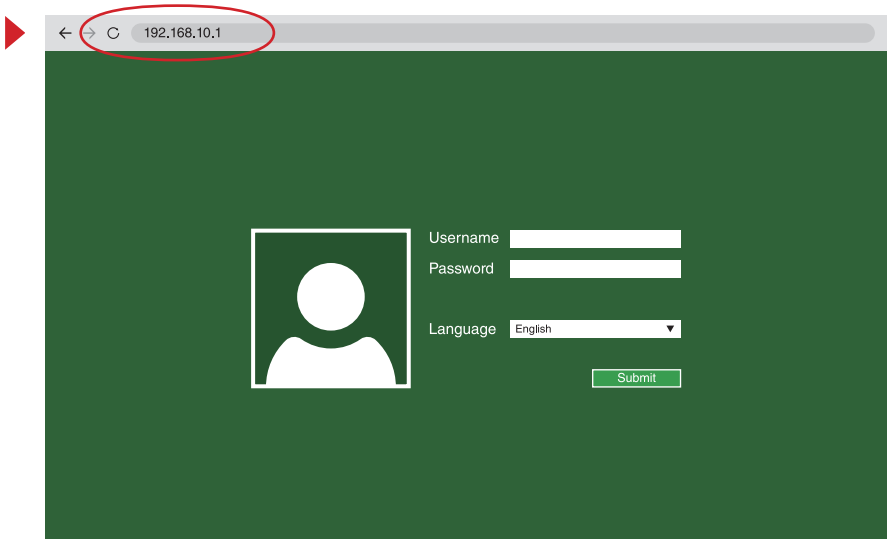

4. Log in using “**admin**” as both the username and the password.

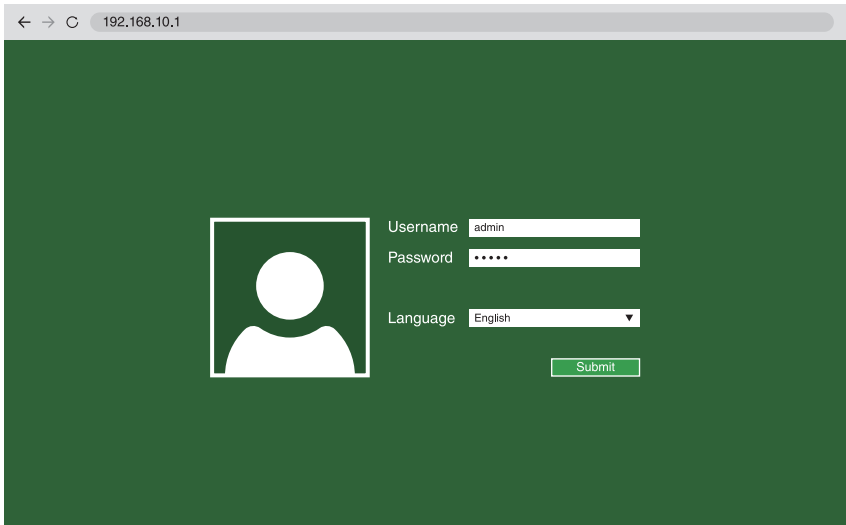

5. The home page should look like the image below. Choose the “**Repeater**” mode for setting up the device wirelessly.

The screenshot shows the device's home page with a green header bar. On the left, a 'Wizard' section contains a dropdown menu with 'AP' selected and 'Repeater' highlighted in green. To the right, a 'Wireless Status' section displays the following information:

Wireless Status	
Mode	AP
Status	Enabled
SSID	WiFi-Repeater
Channel	Auto Select
Security	OPEN
Clients	1


Below the Wizard are four main menu tiles: 'Wireless' (red), 'Internet' (green), 'Management' (blue), and 'Status' (orange). The 'Wireless' tile includes 'Basic Setting' and 'WPS'. The 'Internet' tile shows IP (192.168.10.1), DHCP (Server), and MAC (00:E0:20:1B:EC:5C). The 'Management' tile includes 'Password', 'Save/Reload settings', 'Upgrade firmware', and 'Reboot Device'. The 'Status' tile shows 'Firmware version v28K.RPT.20180524', 'Uptime 0 Day, 02:06:08', and 'Build time 2018 Year 5 Month 24 Day'.

6. Once the repeater mode is selected, the page will show all available Wi-Fi networks.

The screenshot shows a browser window at 192.168.10.1 displaying the 'Wireless Repeater Mode' page. The page has a dark green background and a navigation bar with tabs for 'SSID', 'Channel', 'Security', 'Signal', and 'Select'. A 'Scanning' progress bar is visible in the center, with a circular arrow icon and the text 'Scanning'. At the bottom right, there are 'Apply' and 'Refresh' buttons.




7. Choose the name of your router that you usually use.

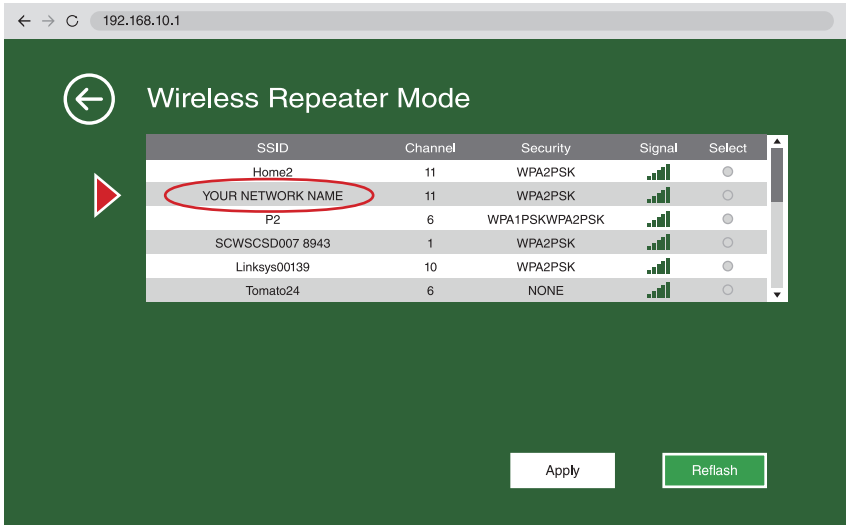


*In this case "YOUR NETWORK NAME" is the name of the main router or wifi


8. Once your router is selected, the Wi-Fi name of the Wi-Fi repeater will be automatically changed to "(YOUR ROUTER)_Ext." This can be changed again to whatever you prefer.

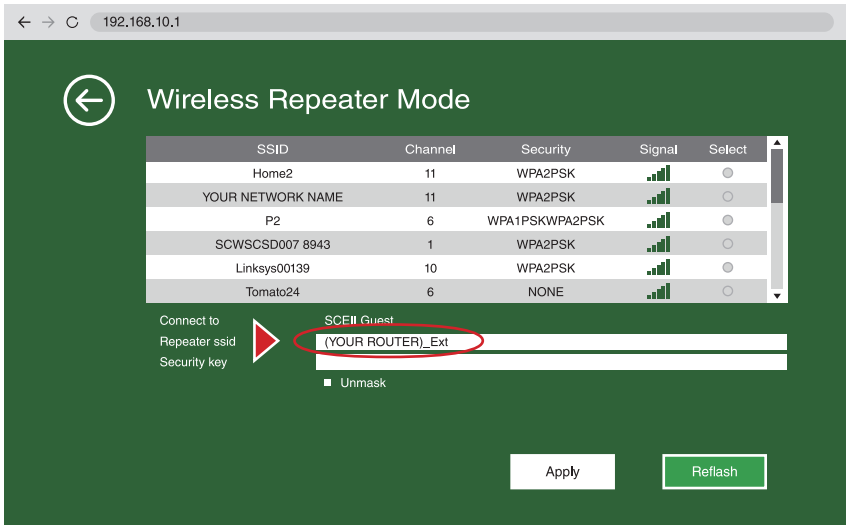


9. The password will be the **same** as the one on your main router.

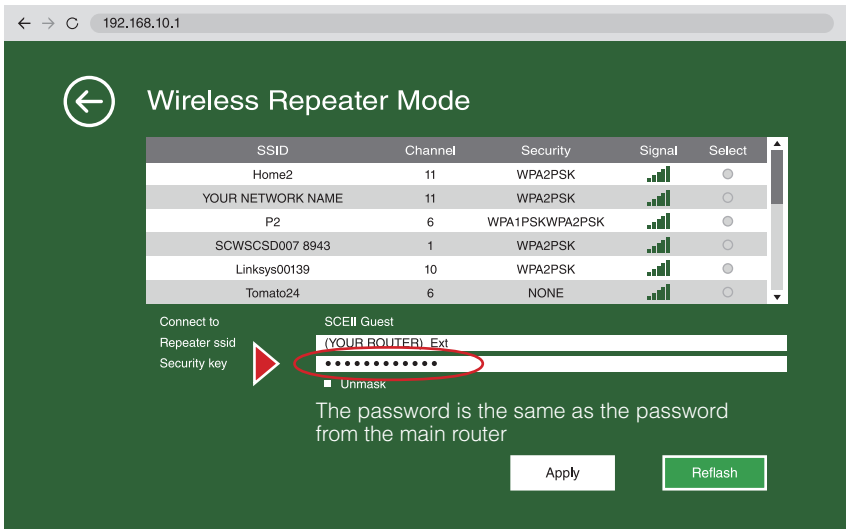


10. Click “**Apply**”.

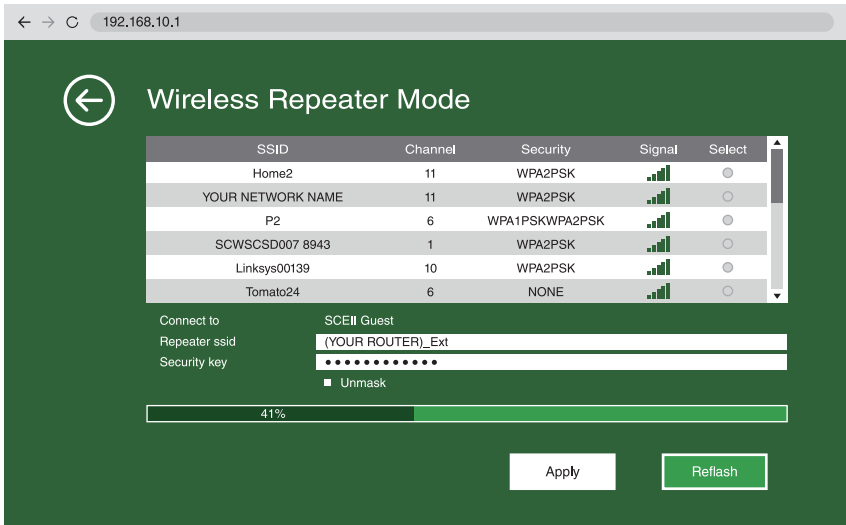

11. The desktop will be automatically disconnected from the Wi-Fi repeater. You will have to reconnect to the Wi-Fi repeater, but this time under the new name of the device.

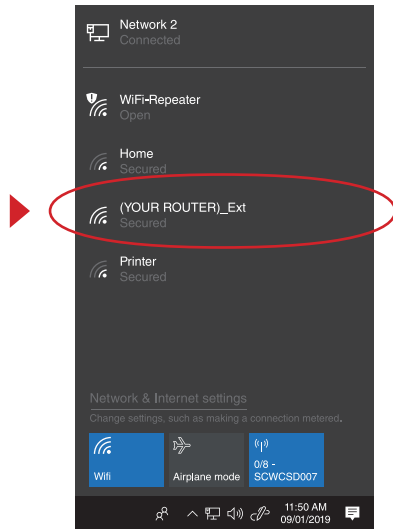



12. Key in your router's password.

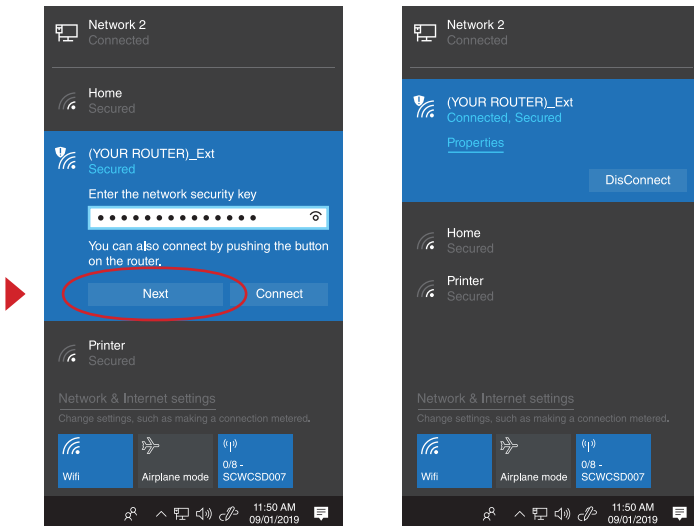

Setting up the Wi-Fi repeater wirelessly using a mobile phone:




*An ios phone was used for the screenshots

1. Plug the Wi-Fi repeater into a power outlet.
2. Connect your mobile phone to the Wi-Fi repeater.
Under settings, go to Wi-Fi to view all available Wi-Fi connections.
3. Select the Wi-Fi name of the device, which will be **“WiFi Repeater”**.

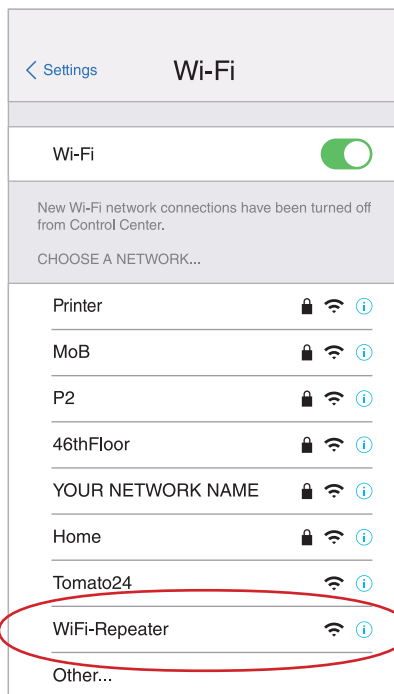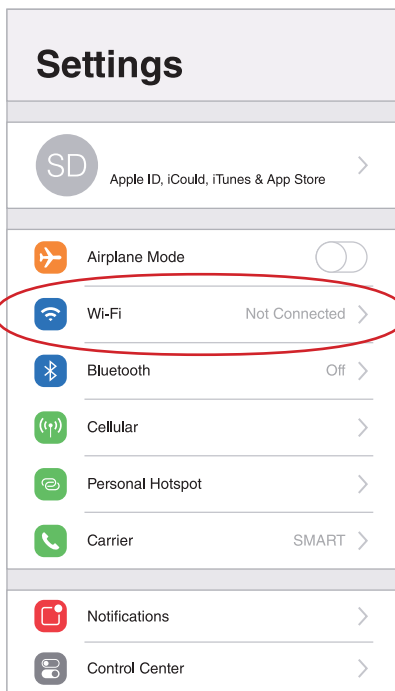

4. Once selected, the login page should automatically pop up.


If the login page does not automatically pop up, open your preferred browser (Safari, Chrome, Firefox, etc.), then key in the IP address, found here or on your SuperBoost: 192.168.10.1

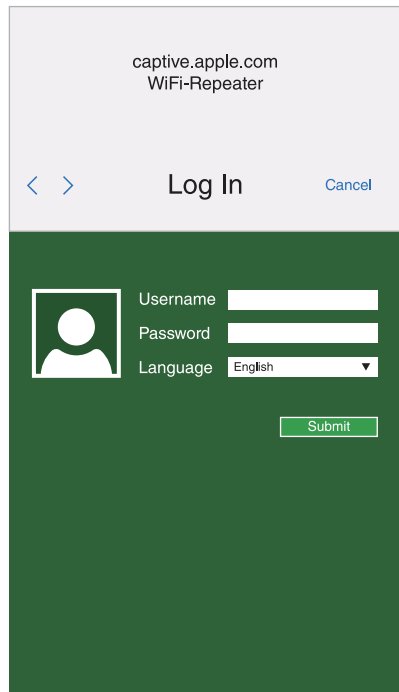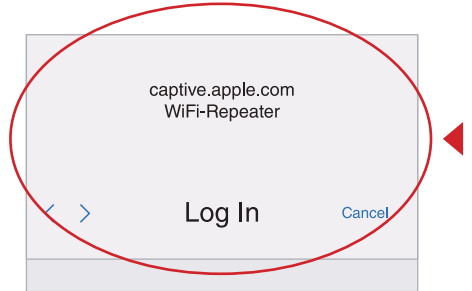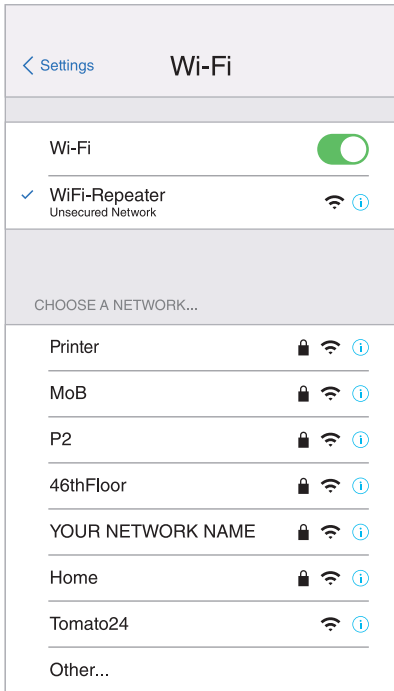

5. Log in using “**admin**” for the username and password.

captive.apple.com
WiFi-Repeater

< > Log In Cancel


 Username
Password
Language

6. Proceed with steps 5-12 from setting up the “**Wi-Fi repeater wirelessly using a desktop**” section.




Setting up the Wi-Fi repeater using AP mode (desktop):

1. Plug the Wi-Fi repeater into a power outlet.
2. Make sure that the ethernet cable is plugged in from your computer to the Wi-Fi repeater.
3. If there is no popup for the login page, go to any browser and type in the IP address which is indicated both here and on the device itself: 192.168.10.1

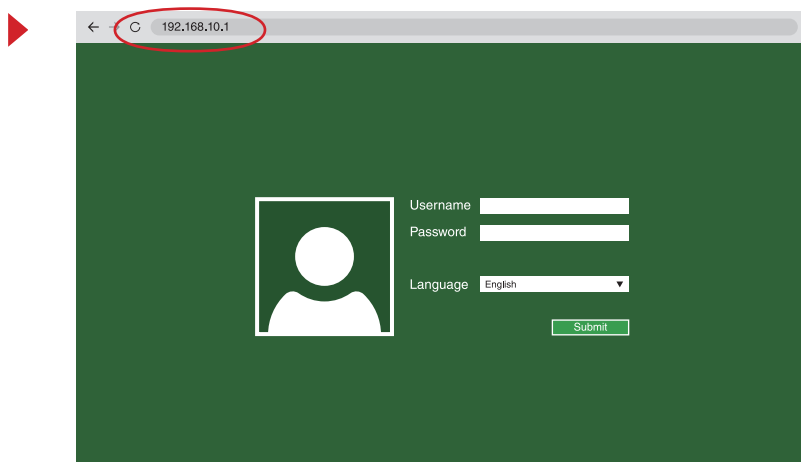

4. Log in using “**admin**” as the username and the password.

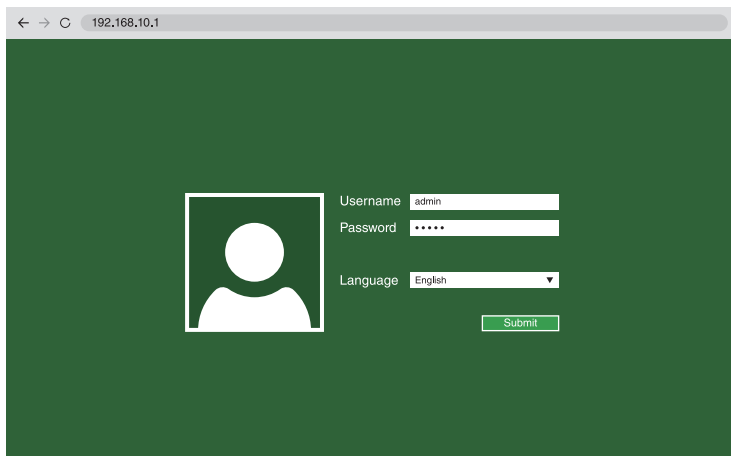

5. The home page should look like the image below. Choose “**AP**” mode for wired connection.

Wizard

AP

Repeater

User-PC Repeater WiFi AP/Router Internet

Wireless Status

Mode	AP
Status	Enabled
SSID	WiFi-Repeater
Channel	Auto Select
Security	OPEN
Clients	1

Wi-Fi Basic Setting WPS

Wireless

e IP 192.168.10.1
DHCP Server
MAC 00:E0:20:1B:EC:5C

Internet

Management Password Save/Reload settings Upgrade firmware Reboot Device

Status Firmware version v28K. RPT.20180524
Uptime 0 Day, 02:06:08
Build time 2018 Year 5 Month 24 Day

6. The next page would ask you to fill out necessary details like creating your own Wi-Fi name and password.

← → C 192.168.10.1

← **Wireless Repeater Mode**

SSID WiFi-Repeater

Channel Auto


Security type Disable

Apply Cancel

*You can change the SSID depending on your preference.



7. Pick your preferred security type from the drop-down menu. The recommended security type is WPA2 PSK.

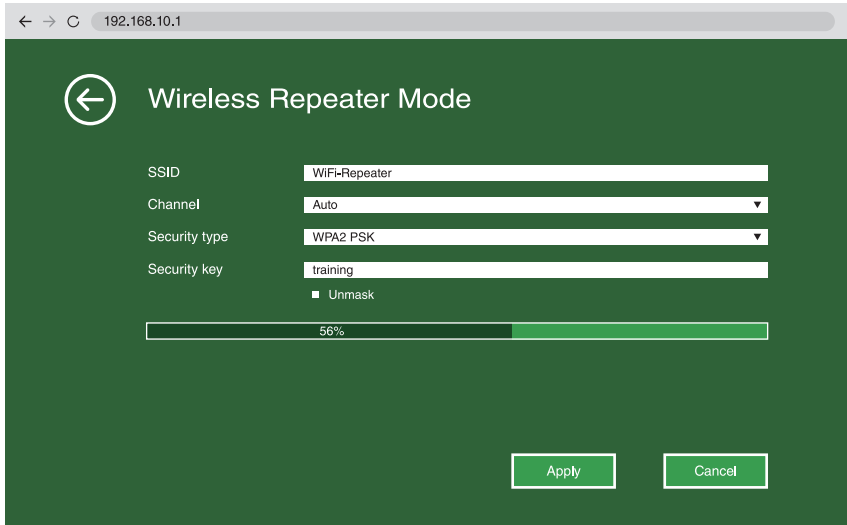

8. Type in a password of your choosing.

9. Click apply then reconnect to the Wi-Fi repeater under its new name and password.

